

OMNIGUARD™ 4

DIFFERENTIAL PRESSURE RECORDER



Owner's Manual



**ENGINEERING
SOLUTIONS INC**

OMNIGUARD 4

Differential Pressure Recorder

Serial #:

The serial number is located inside the case lid.

Dealer Name and Address:

Name

Address

City, State, Zip

Phone

Date of Purchase: _____

Registered to:

Name

Address

City, State, Zip

Phone



**ENGINEERING
SOLUTIONS** INC

6000 Southcenter Blvd, Suite 70
Seattle, Washington 98188-2439
(206) 241-9395 • (206) 241-9411 fax
www.engsolinc.com

Contents

Introduction	2
Section 1: Basic Care	4
Section 2: Navigating The LCD Display	5
Section 3: Quick Setup & Usage	6
<i>Sample Session: Viewing/Changing Settings</i>	6
Hanging the Omniguard 4	7
Display Modes	7
Loading the Thermal Printer Paper	8
Section 4: Detailed Operation	9
Work Area Setup	9
Power-Up	9
Contractor Name	10
Date & Time	10
Alarm Setpoint Selection	11
<i>Example of Setting Alarm Levels</i>	11
Starting/Ending A Job	12
Alarm Condition	13
Alarm Silence, Disable and Rearming	13
Turning Printer On/Off	14
Viewing/Printing Jobs & the Print Job Key	14
Configuration Report	15
<i>Example of Typical Job Printout</i>	15
<i>Example of Job Summary Printout</i>	15
Description of Controls	16
Print/Log Rates	18
Inlet Pressure Response Rate	18
Display Contrast & Backlight	19
Pressure Units	19
Passcode Protect	20
Aux Alarm Setup	20
Zero Calibration	21
Using Help	22
Communication	22
<i>Transferring a Job Log to the PC</i>	22
Remote Monitoring & Modem Setup	23
<i>Communication Remote Monitoring Screen</i>	24
Appendix A: Troubleshooting	25
<i>Shipping & Repair</i>	26
Appendix B: Specifications	27
Appendix C: General Guidelines to Establishing a Containment Site	28
Appendix D: Limited Warranty	30

Omniguard™ 4

Differential Pressure Recorder

Introduction

Unpacking

The *Omniguard 4* is shipped complete and ready to use. When unpacking the unit, please check for the following items:

- Roll of thermal paper (installed)
- 10 ft. inlet pressure tubing
- Owner's Manual
- Registration Card

Save the shipping box and packing material, in the event the unit must be shipped to another location or for service. If you are missing any items shown on the packing list, or if you have any questions regarding your *Omniguard 4*, please call your dealer or Engineering Solutions at (206) 241-9395.

Please remember to fill out and return the Registration Card.

Owner's Manual Overview

This manual covers the setup and operation of the *Omniguard 4*. It uses several different fonts and other special characters to make various unit functions and types of reporting easy to identify. Below is an example of each:

- Text printed on the display screen is shown as: **ALARM 1**
- Thermal printer text is shown as: **NORMAL OP**
- Keys and connectors on the front panel are shown as: **ALARM SILENCE**

Features

- Real-time differential monitoring of vacuum and/or pressure level
- Extremely simple to setup and use, with on screen help available via a **HELP** key
- Log and track by Jobs. Stores multiple jobs, each with unique job name and starting/ending dates
- Contractor name appears in all Job Logs
- Programmable high and low alarm settings
- Windowed case lid allows viewing pressure reading and status from across the room, operates with lid closed to prevent damage to unit from water and other construction debris
- Large easy-to-read graphic LCD display with backlight shows current pressure reading, operation status and alarm setpoints

- Multiple display modes, allows easy viewing of pressure reading from a distance, modes toggled by **DISPLAY** key
- 30+ days internal memory stores pressure readings and alarm occurrences with a date/time-stamp, complete record of operation available for printing and transfer to computer
- Built-in hanging clip gets unit off the ground and away from possible damage, allows easy viewing of monitoring status
- Totally self-contained unit, all necessary parts store securely inside the lid
- Temperature compensation circuitry eliminates the need for off-site calibration
- Pressure readings displayed in Inches WC, Millimeters WC or Pascals
- USB and Serial ports support PC communication for transferring job logs to a computer
- Audible and visual alarm systems with Alarm Silence function
- Operating temperature range 30°- 130°F
- 1 Year Warranty

Accessories

- Remote high intensity strobe light with 95db alarm & 25 ft. cable
- Telephone autodialer for off-site alarm notification
- External modem supports remote off-site monitoring and log transfers to office computer
- Battery pack for portable operation
- NIST traceable certification
- 220VAC, 50Hz power supply operation
- Alternate operating pressure ranges

Section 1: Basic Care

The *Omniguard 4* is built and engineered to provide you with dependable performance for years to come. Following these basic guidelines will insure that you get maximum use from your unit. Once the unit is set up, field operation is easy. Complete reports are virtually automatic, providing the most accurate records of your job site conditions available.

- This unit is designed to measure differential pressure only from +0.250" to -0.250" WC (optional pressure ranges are available).

Caution: Never apply pressure to the inlet port by mouth or with any other strong pressure device.

High pressure will permanently damage the sensor.

- Use only *Omniguard* thermal printer paper.
- Always store the unit away from sources of excessive heat, dust and moisture.
- Never attempt to repair any of the internal components of the unit.
- Protect the unit from strong shocks or vibrations. Be sure the lid is securely closed whenever transporting the unit.
- Be sure to plug your *Omniguard 4* into a power supply that complies with the National Electrical Code. Keep all connections dry. As with any electrical device, this unit has the potential to cause an electrical shock hazard.
- If your unit must be shipped at any time to another location or for service, use the original packing material and shipping box for optimum protection during shipping.

Section 2: Navigating The LCD Display

The *Omniguard 4* display features four screen types, shown below. Press the indicated key to move from screen to screen.

Monitor Screen

The Monitor Screen displays the following information:

- Pressure in "WC":** -0.058" (indicated by a small "WC" in the top right corner)
- Printer On:** Indicated by a printer icon.
- Buzzer Armed:** Indicated by a speaker icon.
- Status Bar:** Shows "NORMAL" in a black bar at the bottom.
- Alarm 1 & 2 Setpoints:** Alarm 1: -0.025", Alarm 2: -0.100"

↓ *press* **MENU**

Main Menu (*Help Menu uses same format*)

The Main Menu displays the following options:

- Menu Items:** VIEW/PRINT JOB LOGS, PRINT JOB KEY SETUP, CONFIGURATION REPORT, PASSCODE PROTECTION, CONTRACTOR NAME.
- Valid Key Choices:** SELECT, EXIT, HELP.
- end of menu indicator:** A small square in the top right corner.
- Highlighted Item:** The first option, VIEW/PRINT JOB LOGS.
- indicates more items available:** A downward arrow in the bottom right corner.
- Screen Name:** MAIN MENU.

↓ *press* **SELECT**

View Settings Screen (*Alarm Setpoints shown*)

The View Settings Screen displays the following information:

- Function Name(s):** ALARM 1: -0.025, ALARM 2: -0.100.
- Info Box:** Alarms 1 & 2 are upper and lower setpoint. Defaults are -0.025 and...
- Valid Key Choices:** SELECT, SAVE, EXIT, HELP.
- use ▲ / ▼ to change value of setting:** Indicated by a vertical slider on the right.
- Setting being changed (edited):** The current value being edited on the slider.
- Operating Window:** The range between the two alarm setpoints.

↓ *press* **HELP**

Help Info Screen (*Alarm Setpoints help shown*)

The Help Info Screen displays the following information:

- Function Name:** ALARM SETPOINTS.
- Detailed Help Info:** -Alarm 1 is upper setpoint. Alarm 2 is lower setpoint. -Normal operating window is area between Alarm 1.
- Valid Key Choices:** EXIT, HELP.
- end of menu indicator:** A small square in the top right corner.
- indicates more help info available:** A downward arrow in the bottom right corner.
- Screen Name:** HELP INFO.

↓ *press* **HELP** again to go to Help Menu Screen

↓ *press* **EXIT** to return to previous screen or Monitor Screen

Section 3: Quick Setup & Usage

This section is a quick reference checklist for setting up your *Omniguard 4*.

1. Insert one end of pressure tubing inside the containment area. Connect the other end of tubing to **INLET #1**.
2. Locate a convenient place for *Omniguard 4* outside the containment. Plug power cord into a power outlet.
3. Turn the unit on. If the message **Set Time & Date** pops up, set the correct Time & Date. This happens if the internal battery has died and the built-in clock lost its settings (don't worry, the battery is rechargeable and lasts over 30 days between charges).
4. Press **PRINT JOB** for a printout of the previous job, if required. A report for the previous job can be printed at any time.
5. Press **START JOB** to begin a new job. Enter a name for the new job and then press **SAVE** to save the job name. The previous job will end and a summary of it will print.
6. Check Alarm 1 & 2 setpoints (displayed in the monitor screen window), adjust if needed.
7. Zero calibrating the unit before a new job is not required (nor recommended). If desired, calibrate unit using **ZERO CALIBRATE** menu item.

The status bar will indicate **WAITING FOR PRESSURE** and the **STATUS** LED will flash green until containment pressure reaches the operating window. Once this is reached, the status bar will display **NORMAL** and the **STATUS** LED will change to steady green indicating that the unit is now in its normal operational mode. Printing and logging of pressure readings begins once the normal operational mode is achieved.

During normal operation, the highest and lowest pressure readings will be printed and logged into memory with a time/date stamp **every 15 minutes** (the default Print/Log rate).

If the monitored pressure then goes **outside** the operating window, the unit will go into alarm mode. The buzzer will sound, the status bar will change to a flashing **>>ALARM<<** and the **STATUS** LED will flash red. The print and log rate of the pressure readings will increase to **every 15 seconds** (the default Print/Log Alarm rate).

Sample Session: Viewing/Changing Settings

1. From the Monitor Screen, press **MENU** to go to the Main Menu.
2. Use the **▲/▼** arrow keys to highlight **ALARM SETPOINTS**.
3. Press **SELECT** to go to the View Setting Screen and allow changes to the **ALARM SETPOINTS**.
4. The **ALARM 1** setting can now be increased or decreased by using **▲/▼**.

5. Once the desired value has been reached, press ◀ / ▶ to highlight **ALARM 2** setting.
6. Use ▲/▼ to adjust the value of the **ALARM 2** setting.
7. Save the updated settings for both Alarm 1 & 2 by pressing **SAVE**. Saved settings are printed and logged into memory.

or EXIT to return to Main Menu **without** saving.

*Note: Press **HELP** at any time to view more detailed help information.*

Hanging the Omniguard 4


The *Omniguard 4* can be hung on a wall for easy viewing and to keep it off of the floor, away from possible damage. Hanging the *Omniguard 4* by the clip allows the cover to close, protecting the unit from water damage while allowing the LCD display and **STATUS** LED to be viewed through the window on the cover. The hose and AC cord should exit the case thru the foam slot, then the cover should be latched closed to protect the unit from water damage.

Use the **DISPLAY** key to flip the display orientation when hanging the unit by its handle (see below).

Display Modes

The **DISPLAY** key on the *Omniguard 4* is used to vary the display view and orientation to accomodate hanging the unit by its handle. The pressure reading can be enlarged to enhance viewing from across the room.

Press **DISPLAY** to toggle the views in the sequence shown below.

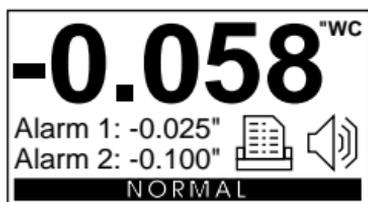

←
press
DISPLAY



↑ press **DISPLAY**




→
press
DISPLAY




Loading the Thermal Printer Paper

Caution: *Only use Omniguard thermal printer paper! Thermal paper prints on only **one** side, the side away from the paper roll. If the roll is installed incorrectly the printer will be able to advance the paper but be unable to print on it.*

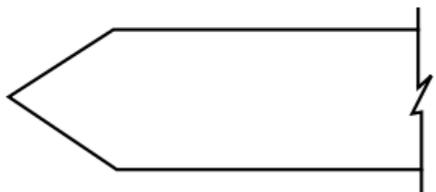


1. Cut the end of the paper to a tapered point.
2. Place the paper **A** into the tray so the paper unrolls from the bottom.

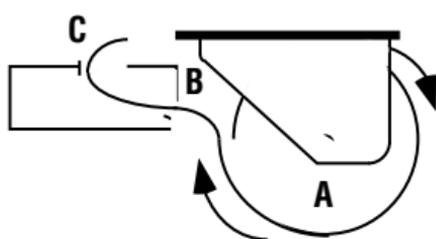

3. Insert tapered point into slot marked **B**, feed through until tapered point can be pulled from the top at **C**.

*Do not use the **PAPER FEED** key to advance the paper.*

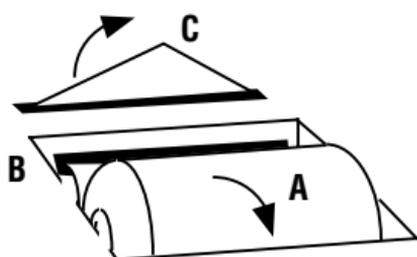

4. From **C**, gently pull until the tapered portion is completely exposed.
5. Replace lid onto the paper housing and secure with the thumbscrew.

Section 4: Detailed Operation

The *Omniguard 4* monitors and records the differential pressure between the **#1** inlet port and the **#2 (Reference)** inlet port.

In abatement applications the *Omniguard 4* should be located outside the containment area and not in any antechambers (i.e. shower or changing room). This allows a supervisor or hygienist to monitor pressure readings without entering the containment area.

Work Area Setup

The *Omniguard 4* should be placed on a solid (non-vibrating) surface, excessive vibrations disrupt accurate pressure measurement, hanging the unit on a wall is okay.

1. The intake end of the pressure tubing must be located a **minimum of 5 feet away from** any openings or HEPA fan/filter units. Choose a location away from excessive dust or moisture.
2. Cut a 1/2" slit in the polyethylene barrier and feed approximately 1 ft. of pressure tubing through it. Tape the tubing securely to the polyethylene.
3. Connect the free end of the tubing securely over the **#1** inlet port. Be careful not to turn the nozzle.
4. The maximum hose length is limited to 70 ft (for 3/16" ID hose). Lengths beyond 70 ft can degrade reading accuracy.
5. The Alarm 1 and Alarm 2 settings should be in negative units when used to monitor a negative containment area. For positive containment applications, use positive units (Inches WC, Millimeters WC or Pascals) for alarm setpoints.

NOTE: It is important that there be no kinks or sharp bends in any part of the tubing. Any blockage could inhibit accurate recording of the pressure in the containment area.

Power-Up

To begin operating the *Omniguard 4*, plug the power cord into a standard wall outlet supplying 115VAC, 60Hz and press the **POWER ON/OFF** key. The first time a new unit is turned on the settings will be at default values.

Initial Power-Up-- the user is asked to set the unit's Date & Time and Alarm 1 & 2 setpoints because they are at the factory defaults. *This happens only until these settings are updated, usually only the first time the unit is used.*

Normal Power-Up Sequence-- If the unit was properly turned off after the previous usage, **POWER OFF** will print. Otherwise **POWER FAIL** will print, indicating that an AC power failure may have occurred. Either message will be followed by the date and time the unit was last powered off.

A diagnostic test will automatically run and the unit will print the date, time and the current alarm setpoints. The unit will then immediately begin to monitor containment pressure.

Until the containment pressure has reached the operating window, the status bar will indicate **WAITING FOR PRESSURE** and the **STATUS** LED will flash green.

*Note: Logging and printing of monitored pressure readings does **not** begin until the containment pressure has reached the operating window!*

You will need to customize the factory Alarm 1 and Alarm 2 setpoints for your application!

Once the containment pressure reaches the operating window (the area between the Alarm 1 and Alarm 2 setpoints) the unit's status bar changes from **WAITING FOR PRESSURE** to **NORMAL** and the **STATUS** LED changes to a steady green. **NORMAL OP** is then printed along with a time-stamp. The **STATUS** LED changes to orange to warn of an impending Alarm condition when the pressure is within 0.005"WC of the Alarm setpoints.

Contractor Name

The *Omniguard 4* can store the name of the Contractor that is using the unit. The Contractor name will appear in all Job logs and printed Reports. Only one name can be stored.

To set the Contractor Name --

1. Press **MENU** to view the Main Menu.
2. Highlight **CONTRACTOR NAME** using ▲/▼.
3. Press **SELECT** to view or change the setting.
4. Use the ▲/▼ keys to change the character. Upper and lowercase letters and numbers are all usable characters to enter.
5. Use the ◀ / ▶ keys to move to the next/previous character to set.
6. When the entire name has been entered, press **SAVE** to save the new name and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated Contractor Name.*

Date & Time

The date and time settings are used as a reference time-stamp for all logged events.

To change the Date & Time --

1. Press **MENU** to view the Main Menu.
2. Highlight **DATE & TIME** using ▲/▼ and press **SELECT** to change the setting.

3. Use ▲/▼ to change the month.
4. Press ◀ / ▶ to advance to the day, using ▲/▼ to change.
5. Repeat the procedure for the year.
6. Press ◀ / ▶ to advance to the time. Use ▲/▼ to set the hours and minutes, use the ◀ / ▶ keys to move from one to the other.

Note: the unit operates on a 24 hour clock.

7. Press **SAVE** to save the updated settings and return to the Main Menu. Press **EXIT** to return without changing the settings.

Alarm Setpoint Selection

The normal operating window is the area between the Alarm 1 and Alarm 2 setpoints. These setpoints can be set anywhere within the operating range of the unit; +/- 0.250" WC in increments of 0.005" WC. The *Omniguard 4* can also operate in units of mmWC or Pascals. (See *Pressure Units*.)

Alarm 1: (default is -0.025" WC)

- upper setpoint of operating window

Alarm 2: (default is -0.100" WC)

- lower setpoint of operating window

The *Omniguard 4* can be used in both positive and negative pressure monitoring applications. The procedure for setting of Alarm setpoints is the same for both applications.

Positive Pressure Application -- Clean room or HVAC system

example settings: **Alarm 1 @ +0.050" WC**
 Alarm 2 @ +0.025" WC

Negative Pressure Application -- Asbestos or lead abatement


example settings: **Alarm 1 @ -0.020" WC**
 Alarm 2 @ -0.050" WC

Example of Setting Alarm Levels

This is an example of setting the alarm levels for negative containment area with an operating window of -0.020" to -0.050" WC.

To change the Alarm Setpoints --

1. Press **MENU** to view the Main Menu.
2. Highlight **ALARM SETPOINTS** using ▲/▼.
3. Press **SELECT** to view or change the setpoint values.

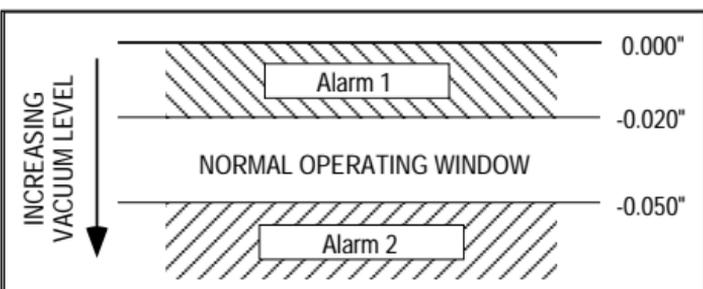

4. Use ▲/▼ to set Alarm 1 to -0.020"WC. The value will change in 0.005" increments. The bar graph at the right of the screen indicates the relative operating window size within the operating pressure range of the unit.
5. Press ◀ / ▶ to highlight Alarm 2. Use ▲/▼ to set the value to -0.050"WC.
6. Press **SAVE** to save the updated settings and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Once the containment pressure reaches a value between -0.020" and -0.050" WC the unit will be in normal operational mode.

Then, if the containment pressure ...

... rises to -0.019" WC, **Alarm 1** will activate.

... falls to -0.051" WC, **Alarm 2** will activate.

Starting/Ending A Job

Before starting a new project you should start a new job. Using the **START JOB** key separates the new job from previous jobs in the log and reports and allows you to "name" the new job. It also ends the current job and causes a Job Summary Report for the job just ended to print.

START JOB will not erase any previous job logs, nor will it alter any other settings (such as the Alarm Setpoints). A report for the previous job can be printed at any time.

*Note: It is a good idea to print a report of the previous job (using **PRINT JOB**) before pressing the **START JOB** key. A report for the previous job may also be printed at a later time by selecting **PRINT/VIEW JOB LOGS** from the main menu.*

To start a new Job --

1. Press the **START JOB** key.
2. Use the ◀ key to move to the cursor to the beginning of the line. Then use ▲/▼ keys to change the character. Upper and lowercase letters and numbers are all usable characters.
3. Use the ▶ key move to the next character to set.
4. When the entire name has been entered, press **SAVE** to save the new Job name. The previous job will end and a summary of it will print, followed by a **NEW JOB** message.


*Pressing the **EXIT** key will return you to the Monitor Screen **without** starting a new job.*

When completed, the screen will display **Ending Last Job**. After a few moments the unit will automatically return to the Monitor Screen.

The memory has a capacity to store 128,000 characters of printed data. This represents 30+ days of normal operation and approximately 200 alarm messages. When the memory is full, the new data will begin to overwrite the oldest data.

Note: Overwritten data cannot be retrieved.

Example of Printout after **START JOB** is pressed--

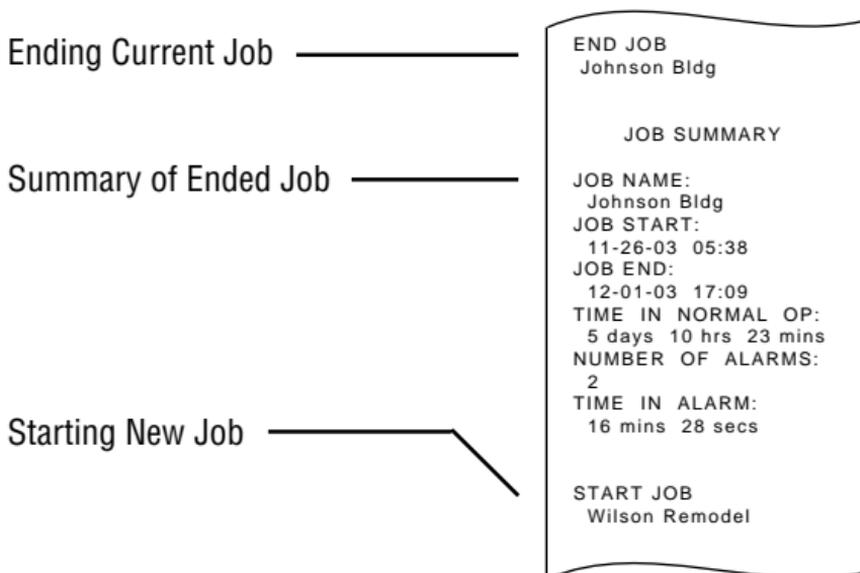

Alarm Condition

Once the containment pressure reaches the operating window, the unit will be in normal operation and the alarms will be armed. Then if containment pressure falls **outside** the operating window, the following will occur:

1. Internal buzzer and **AUX ALARM** output will be activated and will remain active until **ALARM SILENCE** is pressed.
2. The status bar will change to `>>ALARM<<` and begin flashing. The **STATUS** LED will flash red.
3. Printer will indicate which alarm setpoint was exceeded. The print/log rate will increase to the preset alarm rate. Printouts will show the time followed by the current pressure reading.

When the containment pressure returns to within the normal operating window, the unit will log and print **NORMAL OP** with a time-stamp. The buzzer and **AUX ALARM** output will turn off. The **STATUS** LED will return to a steady green. If the alarm was silenced without rearming, it should be rearmed.

Alarm Silence, Disable and Rearming

The buzzer symbol on the Monitor Screen indicates whether the audible alarm and **AUX ALARM** output are armed or disabled. The alarm is always armed when the unit is first turned on. The alarm silence function and **AUX ALARM** output are controlled by the **ALARM SILENCE** key.

To disable or silence the buzzer--

Press **ALARM SILENCE** once and the alarm will be disabled. This will be indicated on the screen with an **X** marking through the buzzer symbol. If the alarm was sounding at the time of disabling it will become silent.

To rearm a silenced buzzer --

Press **ALARM SILENCE** and the buzzer symbol will be displayed without an **X** through it.



Turning Printer On/Off

The **PRINTER ON/OFF** key controls the printer power. All pressure readings are logged to memory regardless of printer setting.

*Note: If a printer error is detected, the printer will automatically turn off and a **JAM** message will appear above the printer symbol. Clear the jam and use the **PRINTER ON/OFF** key to turn the printer back on. Paper jams are logged with a time-stamp.*



Viewing/Printing Jobs & the Print Job Key

The *Omniguard 4* provides a printout of all recorded data, alarm messages and changes in operational settings. The current Job or any previous Job (or portions of those jobs) and the *Omniguard's* Configuration Report can be printed at anytime.

Print Job Key --

Pressing **PRINT JOB** will print a specific report for the current Job (preselected in the **PRINT JOB KEY SETUP** menu item). This makes it easy to print a particular portion of the current Job on a daily or other basis.

To view or print a Job Log --

1. Press **MENU** to view the Main Menu.
2. Highlight **VIEW/PRINT JOB LOGS** using ▲/▼ and press **SELECT**.
3. The selected Job Log will appear on the screen for viewing. Press the **PRINT JOB** key at any time while viewing the report and the Job Report will begin printing.

Printing a log does not cause any data to be erased from memory.
Cancel printing by pressing any key.

Example of Typical Job Printout

Typical startup sequence

Setting changes print for verification

Containment pressure reached
operating window... Normal OP

Alarm Condition (Alarm 1 tripped)

Back into Normal Operation

New Date prints at midnight

Signoff header

```

POWER OFF
11-21-03 19:48:39

CURRENT JOB
Johnson Bldg

      OMNIGUARD 4
11-26-03 08:02:20
ALARM 1 @ -0.025" WC
ALARM 2 @ -0.100" WC

NEW TIME
05:38:00

NEW ALARM 2
-0.090" WC

NORMAL OP 05:51:24
TIME HI "WC LO "WC
06:06 -0.032 -0.028
06:21 -0.031 -0.027
06:36 -0.033 -0.028

ALARM 1 @ -0.025" WC
08:51:26 -0.012" WC
08:51:41 -0.002" WC

NORMAL OP 08:51:55
TIME HI "WC LO "WC
09:06 -0.032 -0.028
    
```

```

11-27-03
TIME HI "WC LO "WC
00:06 -0.032 -0.028
    
```

```

      JOB REPORT
11-27-03 08:33:24

JOB NAME:
Johnson Bldg

CONTRACTOR:
Acme Abatement

SUPERVISOR:
    
```

Example of Job Summary Printout

```

      JOB SUMMARY

JOB NAME:
Johnson Bldg
JOB START:
11-26-03 05:38
JOB END:
12-01-03 17:09
TIME IN NORMAL OP:
5 days 10 hrs 23 mins
NUMBER OF ALARMS:
2
TIME IN ALARM:
16 mins 28 secs
    
```

Configuration Report

The *Omniguard 4* provides a report of all of the unit's current settings (Alarm Setpoints, Log Rates, etc.) and the current system information (memory status, unit serial number, etc.). This report can be viewed and printed at any time.

To view or print the Configuration Report --

1. Press **MENU** to view the Main Menu.
2. Highlight **CONFIGURATION REPORT** using ▲/▼ and press **SELECT**.
3. The Configuration Report will appear in its entirety on the screen for viewing. Press the **PRINT JOB** key and the Configuration Report will begin printing.

Printing a report does not cause any data to be erased from memory.
Cancel report printing by pressing any key.

Description of Controls

Menu Keys

MENU - displays Main Menu or selects the highlighted item for review or editing


SELECT - press to view or change settings of the highlighted item from the Main Menu.

▲ / ▼ - scroll through menu selections or change settings. Step through settings by pressing **◀ / ▶**.

SAVE - saves updated unit settings to memory after editing, then exits to the Main Menu.

EXIT - exits to previous screen; if editing, exits **without** saving any updated settings.

STATUS - LED indicator shows operating status:
 green = normal operation
 green flashing = waiting to reach operating pressure
 orange = within 5 millinches of an alarm condition
 red flashing = alarm condition

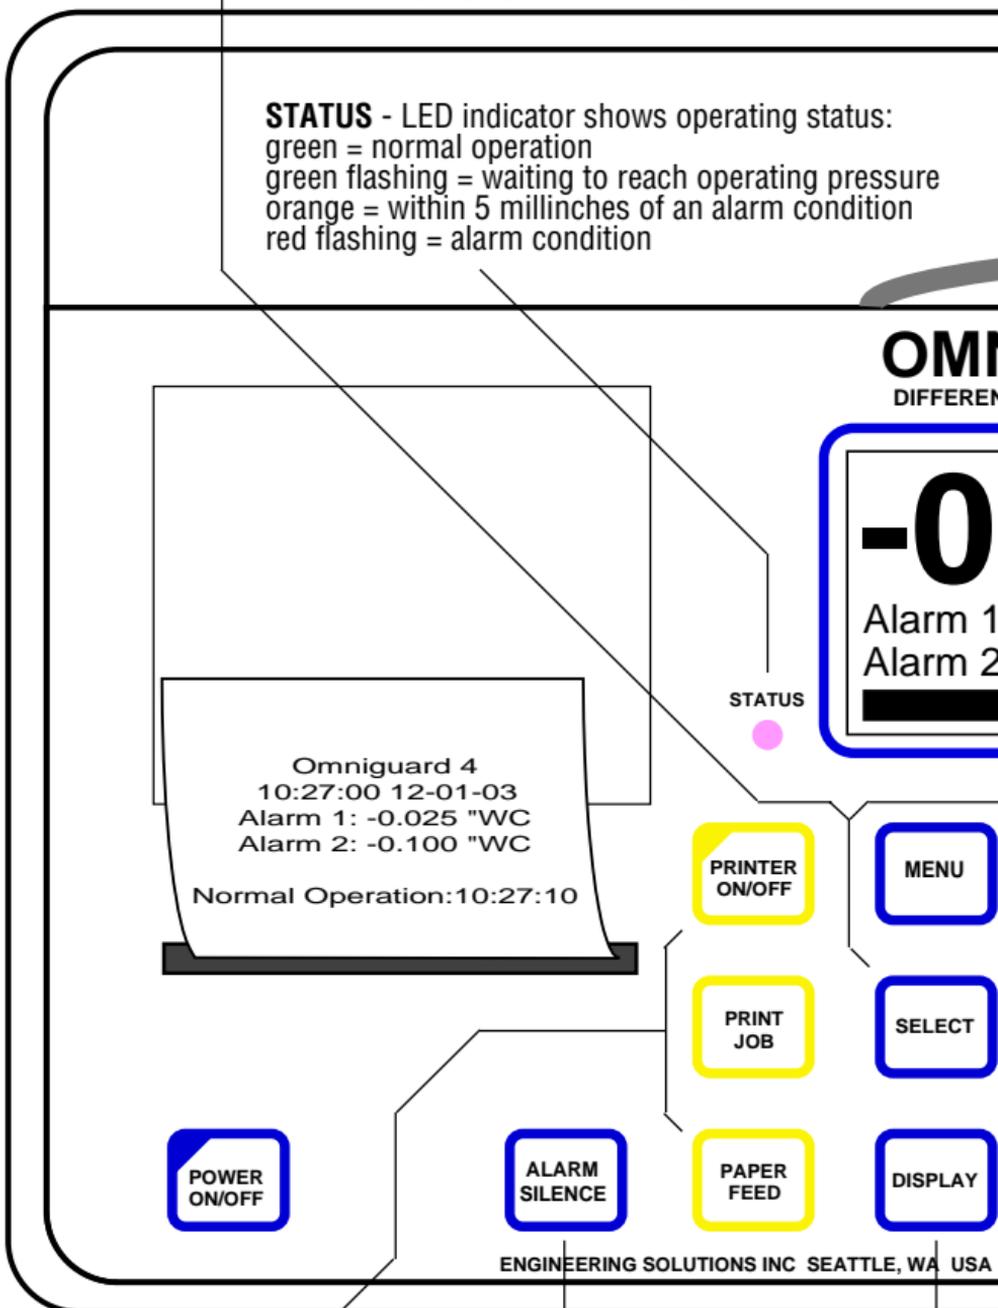

Printer Keys

PRINTER ON/OFF - turns the printer on and off. Printer status is indicated by the printer symbol at the Monitor Screen.

PRINT JOB - press to print a current Job Report. Actual report type is assigned to key in the Print Job Key Setup menu item.
Cancel printing by pressing any key.

PAPER FEED - advances the printer paper.

POWER ON/OFF - turns unit on and off.

Ports

#1 - inlet connector for pressure tubing from containment.


#2 - inlet connector for sensing ambient pressure from outside containment.

DC IN - connects to optional external battery.

AUX ALARM - SPDT relay output supports optional remote alarm or telephone autodialer.

SERIAL - connector for sending data to a PC or an external modem.

USB - connector for sending data to a PC.

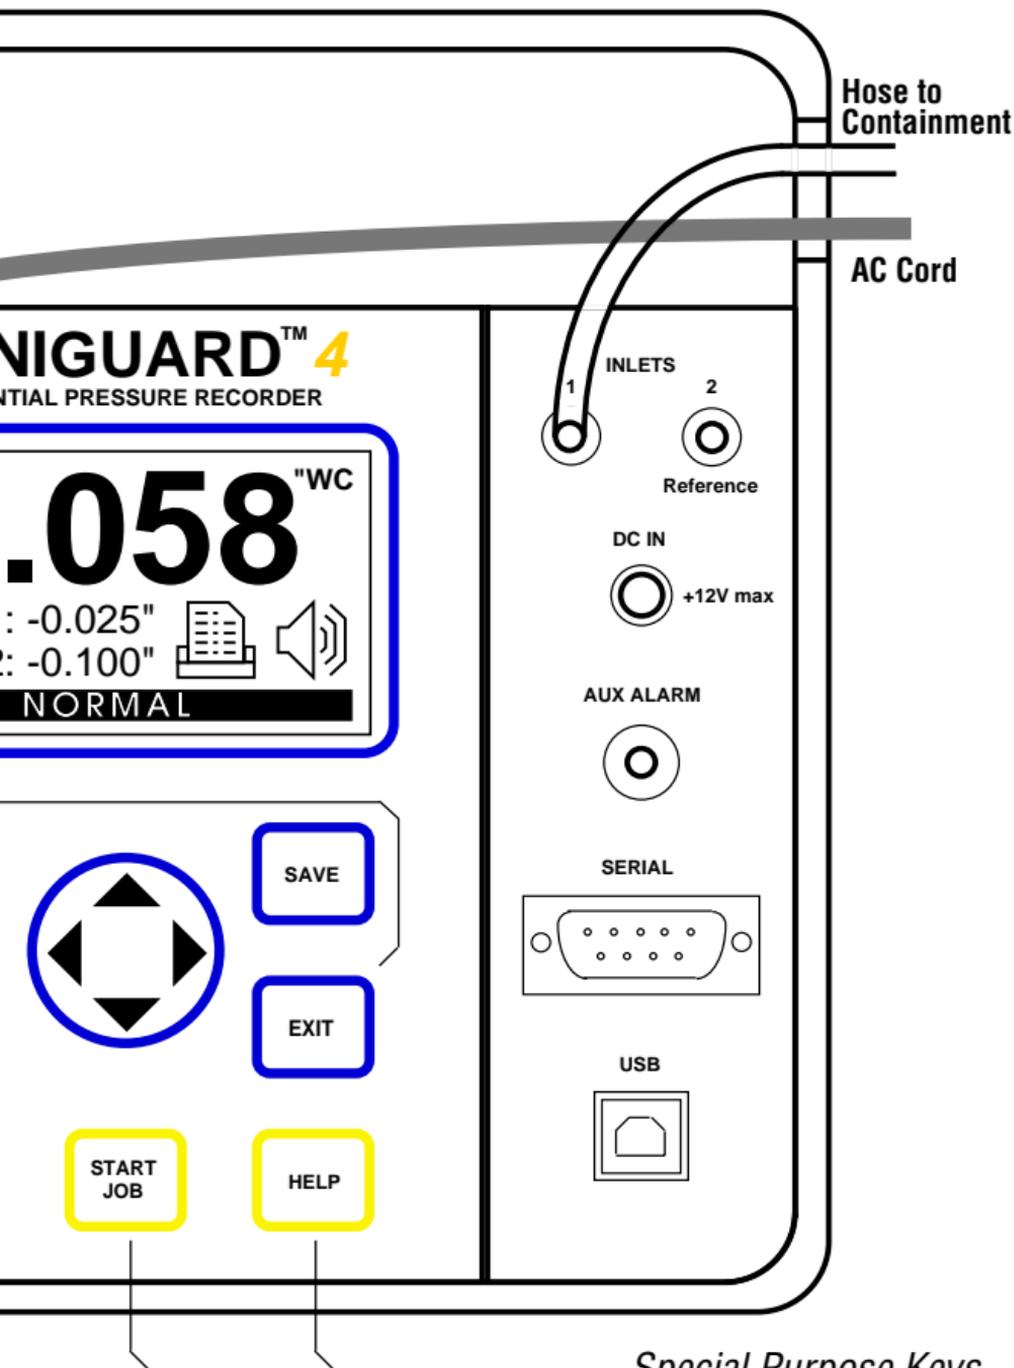

Special Purpose Keys

ALARM SILENCE - silences the internal buzzer and **AUX ALARM** output when an Alarm Condition occurs. Audible Alarm status is indicated by the buzzer symbol at the Monitor Screen.

DISPLAY - toggles display thru 4 different screens: monitoring, pressure only, inverted monitoring & inverted pressure only.

START JOB - press to begin a new Job. Assign a name to the new Job. Ends previous Job and prints its Summary report.

HELP - provides information about the highlighted item or displays Help Menu to select a topic for which more information is available.

Print/Log Rates

The printing and logging of pressure readings begins once the unit reaches normal operation (status bar indicates **NORMAL**). There are two user-definable rates at which printing/logging occurs.

Normal Rate: (default is 15 min.)

- setting choices are 5, 15, 30 minutes or OFF.
- rate at which the highest & lowest pressure readings are printed and logged to memory during normal operation
- when set to OFF, unit will only log & print alarm readings

Alarm Rate: (default is 15 sec.)

- setting choices are 15, 30, 60 or 120 seconds.
- rate at which pressure readings are printed and logged to memory during an alarm condition

To change the Print/Log Rate --

1. Press **MENU** to view the Main Menu.
2. Highlight **PRINT/LOG RATES** using ▲/▼ and press **SELECT** to change settings.
3. Use ▲/▼ to change the **NORMAL RATE**.
4. Press ◀ / ▶ to move from **NORMAL RATE** to **ALARM RATE** and repeat step 3 to change the **ALARM RATE** setting.
5. Press **SAVE** to save the updated settings and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

To conserve paper and log space, the Alarm Print/Log rate will reduce to 15 minutes if the unit stays in an alarm condition for more than 10 minutes. The pressure monitoring rate is not affected. The Alarm Print/Log rate will return to its original setting at the beginning of the next alarm.

Inlet Pressure Response Rate

This setting determines how quickly the unit will react to pressure changes. Reduce this setting if you are using the unit in conditions where air pressure fluctuates rapidly and can cause false alarms, such as in high wind.

Response Rate: (default rate is Medium)

- rate choices are Slow, Medium and Fast
- in windy conditions, set to Slow
- if quick response to small pressure changes is needed, set to Fast

To change the Response Rate --

1. Press **MENU** to view the Main Menu.

2. Highlight **RESPONSE RATE** using ▲/▼ and press **SELECT** to view or change the setting.
3. Use ▲/▼ to change the setting.
4. Press **SAVE** to save the updated setting and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Display Contrast & Backlight

The contrast level and backlight setting on the LCD screen allows the user to adjust the display for optimal viewing in varied lighting conditions. The backlight automatically dims after 4 minutes to extend battery and backlight life. It can be reactivated by pressing any key.

Contrast: (default is 50%)

- range is 0% (min) to 100% (max)

Backlight: (default is ON)

- choices are ON or OFF

To change the Contrast or Backlight --

1. Press **MENU** to view the Main Menu.
2. Highlight **DISPLAY** from the Main Menu using ▲/▼ and press **SELECT** to change the settings.
3. Press ◀ / ▶ to choose **CONTRAST** or **BACKLIGHT** and use ▲/▼ to change the settings for each.
4. Press **SAVE** to save the updated settings and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Pressure Units

The pressure units used by the *Omniguard 4* to display and record pressure readings are selectable.

Pressure Units: (default is Inches WC)

- choices are Inches WC ("WC), Millimeters WC (mmWC) or Pascals (Pa)

To select the desired pressure units --

1. Press **MENU** to view the Main Menu.
2. Highlight **PRESSURE UNITS** by using ▲/▼ and press **SELECT** to change the setting.
3. Use ▲/▼ to change the pressure units to the desired measurement.

4. Press **SAVE** to save the updated settings and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Passcode Protect

The passcode protect feature allows the site manager to assign a passcode that prevents unauthorized changes to the unit's settings. Once enabled, the four digit code must be entered to change any setting. Settings may be viewed without the passcode.

Passcode Protect: (default is OFF)

Passcode: (default passcode is 0 0 0 0)

- passcode can be set to ON or OFF
- master passcode is 7 7 7 7

To set and enable the Passcode --

1. Press **MENU** to view the Main Menu.
2. Highlight **PASSCODE PROTECTION** from the Main Menu using ▲/▼ and press **SELECT** to view or change the setting.
3. Press ▲/▼ to select the passcode On or Off.
5. Press ◀ / ▶ to move to the Passcode digits.
4. Set each digit of the passcode using ▲/▼.
5. Press ◀ / ▶ to move from one digit to the next.
6. Press **SAVE** to save the updated setting and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Note: In the event that the passcode is lost or forgotten it can be reset and settings can be changed using the master passcode.

Aux Alarm Setup

The **AUX ALARM** output can be used to activate either of two optional accessories; the Remote Auxillary Alarm or the Telephone Autodialer. The Aux Alarm Setup menu item is used to set which device type is attached to the **AUX ALARM** connector.

AUX MODE: (default is Remote Alarm)

- choices are Remote Alarm, Autodial 1 min, Autodial 5 min or Autodial 10 min

To select the Autodialer device --

1. Press **MENU** to view the Main Menu.
2. Highlight **AUX ALARM SETUP** using ▲/▼ and press **SELECT** to view or change the settings.

3. Press ▲/▼ to change the setting to the Autodialer mode. The 1, 5 and 10 minute options set the retrigger time (the amount of time the Autodialer must wait between multiple alarms before dialing out a second time).
4. Press **SAVE** to save the new setting and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

In an alarm condition, the **AUX ALARM** output will activate the Autodialer only once in a given time period (1,5 or 10 minutes). This prevents the autodialer from calling more than once if the alarm is tripping multiple times within a short period of time. After the 1, 5 or 10 minute period has elapsed, the autodialer will dial out again if the unit goes back into an alarm condition.

The autodialer may be disabled by pressing the **ALARM SILENCE** key. The **AUX ALARM** output will only rearm once the unit has returned to normal operation, this prevents the autodialer from continuously dialing during an alarm condition.

Zero Calibration

The *Omniguard 4* does not require calibration between jobs. Internal temperature compensation and other circuitry provides unsurpassed accuracy over a 30°- 130° Fahrenheit range.

*That's the reason for the clicking noise you hear the unit making. Its constantly compensating for zero offset drift. We **do** recommend annual calibration verification by the factory.*

To manually reset the zero point --

1. Disconnect the pressure tubing from the **#1** and **#2** inlets.
2. Press **MENU** to view the Main Menu.
3. Highlight **ZERO CALIBRATE** using ▲/▼ and press **SELECT** to choose zero calibration.
4. Press **SAVE** to calibrate and return to the Main Menu.

*Pressing any other key will return you to the Monitor Screen **without** resetting zero.*

When completed, the screen will display **DONE**. After a few moments the unit will automatically return to the Monitor Screen.

*Note: Allow the unit to warm up for 15 minutes prior to zero calibrating. This permits the pressure sensor to stabilize its readings. Zero calibration can only be done when the pressure tubing is **not attached to the unit**.*

Using Help

To access Help information on a highlighted topic --

- Press **HELP**. Detailed information about the unit's current status or the highlighted function will be displayed.

To access the Help Menu --

1. Press **HELP** twice.
2. Highlight the desired topic using ▲/▼.
3. Press **SELECT** to view the information available for that topic.

Communication

The *Omniguard 4* has built-in USB and Serial ports to connect to a PC or to an optional External Modem. The Windows® compatible Omniguard 4 Communication software must be installed in the PC and is available as a free download @ www.engsolinc.com.

The *Omniguard 4* can communicate with a PC three different ways...

1. Connect a USB cable directly to the PC.
2. Connect a Serial cable directly to the PC.
3. Connect via dialup to the PC. Requires an external modem (with a phone line connected to it). Configure the modem using the **MODEM SETUP** menu item.

Once connected, you can transfer the current Job Log or all Job Logs to the PC. You can also “remotely monitor” the *Omniguard 4*, observing pressure, status and log updates as they occur on the job site.

Before a PC can communicate with an Omniguard 4, you must first download and install the Omniguard 4 Communication software from our web site @ www.engsolinc.com. Detailed instructions for installation and operation of the software are included with the download.

Transferring a Job Log to the PC

The Job Logs stored in the *Omniguard 4*'s memory can be transferred to an IBM compatible PC for permanent storage, statistical analysis and summary report generation. Job Logs transferred to a PC can be reviewed and reprinted any number of times.

To transfer a job log --

1. Install the Communication program into your computer.
2. Select either the USB cable (included with your *Omniguard 4*) or the optional Serial cable (available from your distributor). Plug the cable into the appropriate connector on the *Omniguard*.

3. Plug the other end of the cable into the appropriate USB or Serial port on your PC.
4. Run the Communication program and follow the instructions shown on the computer screen.

Remote Monitoring & Modem Setup

Office personnel using their modem equipped PC can call the phone number of the site and connect to the *Omniguard 4* through its optional External Modem. The modem plugs into the **SERIAL** port and requires a standard RJ11 phone plug and a working telephone line. Remote off-site monitoring of *Omniguard 4* is supported along with remote job log transfers.

Caution: *Transferring Job Logs to the PC via modem may take up to 5 minutes (depending on the modem speed and the size of the Job Logs being transferred). The Omniguard 4 **is not** actively monitoring during the log transfer. Once the transfer is complete, the unit resumes monitoring the pressure.*

The external modem setup should be tested and its proper operation confirmed before leaving the job site. Before performing the modem test, use the Modem Setup menu item to configure the *Omniguard 4* to work with the external modem you are using.

To configure and test the Modem setup --

1. Plug the modem cable into the **SERIAL** port and modem.
2. Plug the phone cable into the modem and a working telephone line RJ11 phone jack. Turn the modem on.
3. Press **MENU** to view the Main Menu.
4. Highlight **MODEM SETUP** using ▲/▼ and press **SELECT** to view or change the settings.
5. Press ▲/▼ to change the Init Command setting if necessary.
6. Press ◀ / ▶ to move to Dialing Prefix and change if necessary. The Dialing Prefix should be set to **None** unless it is needed to reach an outside line.
7. Press ◀ / ▶ to move to Test Modem and then press **SELECT** to test the modem settings. The testing will start and its status will be displayed on the screen. If an error message appears, a suggested solution will also be made.

Testing: *The Omniguard 4 will attempt to call a special Test phone number set up by Engineering Solutions. It will connect with a PC and confirm the modem is operating correctly.*

8. Press **SAVE** to save the settings and return to the Main Menu.

*Pressing the **EXIT** key will return you to the Main Menu **without** saving the updated settings.*

Omniguard 4 Communication Remote Monitoring Screen

Each section of the window can be opened or closed independently. Remote monitoring occurs in real-time and does not affect the normal operation of the *Omniguard 4*.

The screenshot shows a software window titled "-0.015"WC" with a menu bar (File, Edit, Options, Help). The main display shows "-0.015" WC" and "NORMAL" with a radio button. Below is a "Hide Log" section containing a table of log entries. At the bottom is a "Hide Status & Info" section with various system parameters. Callouts on the left identify these sections: "Remote Monitoring" points to the top section, "Job Log" points to the table, and "Status & Info" points to the bottom section.

TIME	HI "WC	LO "WC
13:02	-0.015	-0.017
13:07	-0.016	-0.017

Job Name: "North 22nd"
Job Start Time: 10-22-03 09:26
Time In Normal Op: 1 days 2 hrs 55 mins
Alarm Count: 9
Time In Alarm: 16 mins 28 secs
Contractor Name: "Acme Inc."
Software Version: V6.1
Unit S/N: G401002
Sensor S/N: G401002
Calibration Date: 08-22-03

Appendix A: Troubleshooting

If you experience problems with your *Omniguard 4*, use this section to try to solve the problem. If you are unable to solve the problem, consult with your dealer or call Engineering Solutions at (206) 241-9395 (8:00 a.m.-12:00 noon, 12:30-4:30 p.m. Pacific Time) and ask for Technical Support, or e-mail techsupport@engsolinc.com.

Problem: The unit does not display the proper pressure.

Remedy: Check to see that the tubing is connected properly to the #1 inlet port.

Remedy: Make sure that the tubing does not have a kink or a sharp bend.

Remedy: Make sure that you are using the correct 3/16" ID tubing size, and the end of the tubing on the inlet nozzle is not worn. If it is worn or loose, cut off 1" of the tube using a sharp knife and reinsert on the inlet nozzle.

Remedy: Make sure that the tubing connection into the containment area is properly placed and secured as described in Section 4: Work Area Setup.

Problem: Excessive momentary alarms.

Remedy: Adjust alarm setpoints to allow for normal air pressure fluctuations caused by entries into work area or other equipment. Make sure that you are within the minimum negative air pressure requirements.

Remedy: If you suspect that wind may be causing rapid pressure fluctuations, reduce the setting for Response Rate (see Section 4: Detailed Operation).

Problem: Printer indicates an alarm but audible alarm was not activated.

Remedy: Confirm that the Audible Alarm is on. The buzzer icon should be shown, in the right corner of the display, without an **X** through it (see Section 4: Alarm Silence, Disable and Rearming).

Problem: Printer is not working properly or a paper jam occurs.

Remedy: The printer may be turned off. Turn it on using the **PRINTER ON/OFF** key.

Remedy: Thermal paper prints on only **one** side, the side away from the paper roll. If installed incorrectly, the printer will be able to advance the paper but unable to print on it. Make sure that the paper is fed properly as described in Section 3: Loading the Thermal Printer Paper.

Remedy: Paper jams can occur if the paper is allowed to fall back into the printer head after tearing off a report. If a paper jam occurs, the unit will automatically shut the printer off to prevent

damage. The printer symbol will be displayed with a **JAM** message (see Section 4: Turning Printer On/Off). After the paper jam is cleared, use the **PRINTER ON/OFF** key to turn the printer back on.

Note: Do not apply oil or grease of any kind to the printer as this will attract dirt and debris and could cause permanent damage to the printer mechanism.

Problem: OMNIGUARD 4 unit does not enter normal operation when turned on, and does not print.

Remedy: For normal operation, the monitored pressure **must** be between the Alarm 1 and Alarm 2 setpoints. When the unit is first turned on, the containment pressure will not likely be within the alarm setpoints, and the unit will not print or log the pressure readings. The unit will begin printing and logging the pressure readings only after it senses containment pressure has reached the normal operating window.

Problem: The unit displays Date & Time Not Set followed by Factory Default after the power has been off.

Remedy: The internal clock battery is discharged. Leave the unit plugged in for 24 hours to recharge the battery. It will be necessary to update the Date and Time settings. The internal battery should last for 30+ days without recharging. It recharges automatically any time the unit is plugged in. No other settings need to be re-entered (they are saved in non-volatile memory and do not require the internal clock battery).

Shipping & Repair

Please call the Engineering Solutions customer service department for a return authorization. A number will be assigned to aid in tracking your unit.

Send the entire unit, enclosing a brief explanation of the problem along with your company name, address, phone number and name of the individual responsible for the unit. **The return authorization number must be clearly marked on the outside of the box.** No COD's will be accepted. If the original packing materials are not available, package the unit securely in a sturdy container with enough padding to surround the unit on all sides. The unit should not be able to be shift after packing. Engineering Solutions will not be responsible for any damage which may occur.

Send to : Engineering Solutions, Inc.
 6000 Southcenter Blvd, Suite 70
 Tukwila, WA 98188-5742
 (206) 241-9395 sales and service

Appendix B: Specifications

Differential Pressure Range: +/-0.250" WC (+/-6.35mmWC, +/-62.5 Pascals)

Accuracy: +/- .003" WC or +/-1% of reading whichever is greater

Resolution: 0.001" WC, (+/-0.05mm WC, +/-0.5 Pascals)

Burst Pressure: 3 psi (20 kPa) on either inlet port

Pressure Units Displayed: "WC (Inches Water Column), mmWC (millimeters Water Column), or Pa (Pascals)

Data Storage: 128,000 characters, 30+ days of readings (over 4,000 logged events) in non-volatile memory (no battery req'd)

Display: Graphic Liquid Crystal Display (LCD) with adjustable backlight and over 3.5 sq. inch viewing area

Internal Clock: the internal clock is powered by a self-charging lithium-ion battery that provides 30+ days of clock operation when AC or DC power is not present

Printer: 20 character wide thermal printer (uses 2.2" wide thermal printer paper)

Printing/Logging Rates:

Normal Operation -- highest and lowest pressure readings printed/logged at intervals of 5, 15, 30 minutes or OFF

Alarm Condition -- current pressure reading printed/logged at intervals of 15, 30, 60 or 120 seconds for first 10 minutes of alarm condition, increasing to 15 minute intervals thereafter

Alarms: Two programmable alarm setpoints, 95db audible alarm with flashing LED and on-screen warning indicate alarm condition

Pressure Inlets: Two 3/16" OD barbed hose connectors, 10 ft of hose provided

Serial Port: DB-9 Male, RS232

USB Port: USB V1.0 Type-B

Aux Alarm Port: 1/8" stereo phono jack, relay contact outputs: NC, NO and Common rated 1A @ 30Vdc or 0.5A @ 115VAC

Power: 115 VAC 60Hz with 6 ft power cord (220 VAC 50Hz optional, 6VDC battery pack optional)

Case: Dimensions 9.25" x 7.5" x 4.5", Shipping Weight 6 lbs., Material is copolymer polypropylene with polycarbonate window in the lid, handle and stainless steel hanging hook

Warranty: One Year Limited Warranty

Appendix C: Establishing a Containment Site

The *Omniguard 4* monitors and records the differential pressure between the #1 inlet port and the #2 (**Reference**) inlet port.

In abatement applications the *Omniguard 4* should be located outside the containment area and not in any antechambers (i.e. shower or changing room). This allows a supervisor or hygienist to monitor pressure readings without entering the containment area.

This section of general guidelines to establishing a containment site is provided by Engineering Solutions Inc for informational purposes only. Engineering Solutions Inc is not responsible for its accuracy nor conformance with specific regulations for your area. Engineering Solutions Inc specifically advises all users to obtain the advice of qualified professionals for each use and application of the *Omniguard 4*. Engineering Solutions Inc makes no claims as to the proper usage or interpretation of the data provided by the *Omniguard 4*.

General Guidelines to Establishing a Containment Site

1. The contractor and hygienist are to be certified prior to qualifying to bid on an abatement job.
2. All workers are to have undergone specific training in abatement procedures.
3. Typical abatement requirements:
 - a. containment area to be sealed within a double layer of 8 mil plastic or equivalent.
 - b. before beginning work within the containment area and at the beginning of each shift, the containment area must be inspected for breaches and smoke-tested for leaks, and any leaks sealed.
 - c. air volume within containment must be changes 4 times per hour, i.e. the entire air volume must be evacuated every 15 minutes.
 - d. minimum pressure in containment is -0.020"WC, i.e. the differential pressure between containment pressure and ambient/outside pressure must be at least -0.020"WC as measured by a manometer.
 - e. the containment area must be kept under negative pressure throughout the period of its use.
 - f. air movement must be directed away from employees within containment and toward a HEPA filtration unit.
 - g. fiber levels within the containment area must be sampled at a specific interval and be less than a proscribed level, i.e. sampled 1 time a day or more and fiber levels below "5 fibers/100 fields".

4. Calculating site airflow requirements:

A typical heavy duty HEPA fan/filter unit has a 1000 CFM (cubic feet per minute) capacity with a new filter. Units are typically derated by 25%, so a 1000 CFM unit is derated to 750 CFM by the hygienist when calculating actual site airflow requirements.

Example #1: A room measuring 20 x 20 ft with a 10 ft ceiling encloses 4000 CF of air. To meet the 4X per hour change rate the fan/filter unit must be capable of pulling 267 CFM of air ($4000 \times 4/60$) from the containment area and maintain a minimum negative pressure of -0.020"WC.

Example #2: Room size is 20 x 50 with 12 ft ceiling. Requires $(20 \times 50 \times 12) \text{ CF} \times 4 / 60 = 800 \text{ CFM}$ or 2 units (of a 1000 CFM fan/filter unit...remember the fan/filter unit is derated to 750 CFM).

Example #3: Room size is 100 x 100 with 16 ft ceiling. Requires $(100 \times 100 \times 16) \text{ CF} \times 4 / 60 = 10667 \text{ CFM}$ or 15 fan/filter units (of a 1000 CFM unit).

5. The containment area pressure should be monitored at various points to confirm adherence to abatement requirements. Remember that air is a medium, and air pressure is not identical throughout the containment area. The pressures at specific locations within the containment area vary due to distance, room temperature, proximity to openings, room geometry, etc. Typically one manometer is used for every two "rooms" that have a doorway and attached hallway, up to 1000 square ft.
5. Using a manometer that provides highly accurate pressure readings, timestamped logging of all readings, and audible alarm and printouts of all logged readings protects workers and the public from accidental exposure to airborne hazards and provides proof of containment to protect employers from environmental contamination lawsuits.

NOTE: It is important that there be no kinks or sharp bends in any part of the tubing. Any blockage could inhibit accurate recording of the pressure in the containment area.

Appendix D: Limited Warranty

Engineering Solutions warrants that all products, component parts and accessories will, for a period of twelve (12) months from date of purchase, be free from defects in material and workmanship under normal use and service.

PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS F.O.B., ENGINEERING SOLUTIONS, INC., 6000 SOUTHCENTER BLVD, SUITE 70, TUKWILA, WA 98188.

To keep this warranty valid, the purchaser must (a) return signed Registration card to Engineering Solutions within fifteen (15) days of purchase, (b) have promptly informed Engineering Solutions' customer service department of any defects in writing, (c) properly used, maintained and repaired the Product, and (d) have proof of purchase.

This warranty does not cover normal wear and tear or defects due to (a) improper or negligent handling or unauthorized modifications, (b) defective or improper premises, chemical, electrochemical or electrical influences, (c) weather or other influences of nature.

LIMITATIONS OF WARRANTY - THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY AND ALL OTHER WARRANTIES AND OBLIGATIONS OF ENGINEERING SOLUTIONS OR ITS SUPPLIERS, EXPRESS OR IMPLIED. ENGINEERING SOLUTIONS EXPRESSLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

LIMITATION OF REMEDY- Under no circumstances shall Engineering Solutions or any of its suppliers be liable for any loss or damage, including, but not limited to, loss or damage arising out of failure of the Product to operate for any period of time, inconvenience, use of rental or replacement equipment, loss of profit or other economic loss, or general, direct, special, indirect, incidental or consequential damages or property damages.

PRODUCT SUITABILITY - Many states and localities have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While Engineering Solutions attempts to assure that its Products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the Products are installed or used. Engineering Solutions recommends that, before purchasing and using a Product, purchasers review the Product application, and federal, state and local regulations, to be sure that the Product, installation, and use will comply with them.

© 1995-2004 Engineering Solutions Inc. Omniguard™ is a trademark of Engineering Solutions Inc. Product specifications subject to change without notice. First Printing 1/04. Printed in the U.S.A.

\$10.00 P/N OG4-MAN.100


Omniguard 4 Quick Reference

Starting A New Job

1. **PRINT JOB** for printout of current job.
2. **START JOB** to name new job & end previous job.
3. Check Date & Time, set if needed.
4. Check Alarm 1 & 2 setpoints (operating window), adjust if needed.
5. Connect pressure tubing to #1 inlet.

Unit will display WAITING FOR PRESSURE and STATUS LED will flash green until pressure reaches operating window. Once reached, displays NORMAL and STATUS LED shows steady green, unit begins printing & logging of pressure readings.

Monitor Screen

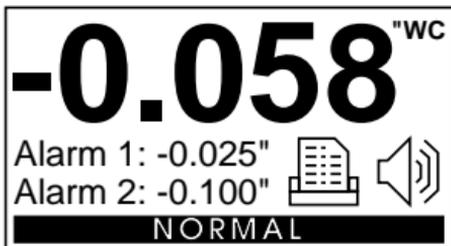


Pressure Only Monitor Screen



Main Menu



Alarm Setpoint Screen

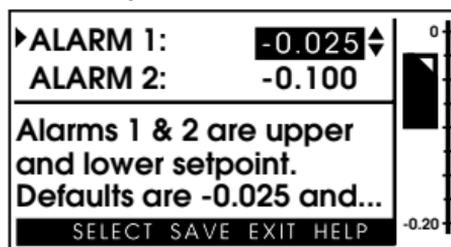

Main Menu

- View/Print Job Logs
- Print Job Key Setup
- Configuration Report
- Passcode Protection
- Contractor Name
- Alarm Setpoints
- Date & Time
- Print/Log Rates
- Response Rate
- Pressure Units
- Zero Calibrate
- Aux Alarm Setup
- Display Setup
- Modem Setup

• use **SELECT** to view or change settings of main menu functions •


Example Editing Session

1. **MENU** to go to main menu.
2. Scroll highlight to **ALARM SETPOINTS** using **▲/▼**.
3. **SELECT** to go to the settings screen.
4. Alarm 1 setting can now be increased or decreased by using **▲/▼**.
5. Once desired value is reached, press **◀ / ▶** to highlight Alarm 2 setting. Pointer to left of Alarm 1 will move to Alarm 2 and info box text will show Alarm 2 info.
6. Use **▲/▼** to adjust value of Alarm 2 setting.
7. **SAVE** updated settings for Alarm 1 & 2 by pressing **SAVE**. **SAVE**'ed settings are printed & logged to memory.

or

EXIT to return to main menu **without** saving . You can exit editing session at any time.

Alarm Setpoint Help Screen

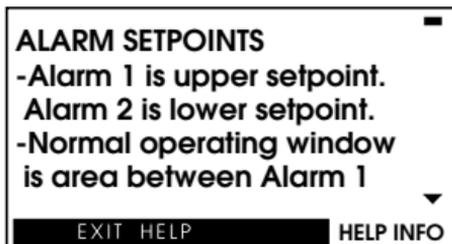

Help Menu

- How To Navigate
- Current Status
- Audible Alarm Silence
- Loading Paper
- ? Will Not Print
- ? Pressure Stuck
- ? Paper Jam
- ? False Alarms
- ? Tech Support

• detailed **HELP** information is **always** available by pressing **HELP** •