

HydroForce 2000 Portable Heater

Operational Instructions

Precautions:

1. Always use with grounded outlets.
2. Must use a separate circuit for heat (other than the one being utilized by the extractor.)
3. Do not operate in standing water
4. Do not use volatile substances in or near equipment
5. Never operate without equipment completely assembled
6. Use standard cleaning chemicals in equipment. **Never use solvents.**

Operation of Portable Heater:

1. Be sure there is sufficient solution in extractor tank to operate equipment before plugging in extractor and heater.
2. Plug extractor and heater into separate grounded circuits. Heater alone can use up to 14.5 amps of current.
3. Turn solution pump on before turning on heater.
4. Heater requires about five minutes to reach operational temperature after it is first turned on.
5. When turning extractor and heater off, be sure to turn the heater off first.

Cautions:

1. **Do not operate heater without water**
2. Fittings on heater may become extremely hot during operation. Allow sufficient time to cool, or run solution through extractor with heater turned off before disconnecting heater or performing maintenance on heater.
3. Before disconnecting heater be sure to activate wand trigger (with the extractor & heater turned off) to relieve back pressure
4. Do not spray water directly onto heater. To clean, wipe with a damp cloth.