

Ruwac DISTRIBUTION BOXES

F/F XXXXXXXX

Distribution Boxes can be attached to any Ruwac Construction Series vacuum to safely redistribute a maximum flow of power to your vacuum and construction equipment. The result is fuse protection for your vacuum system, ensuring that your Ruwac vacuum and external piece of machinery are always working at their maximum potential. These boxes are ideal when using concrete grinders, scarifiers, shavers, shot blast equipment and polishing equipment.

- NEMA 4 Enclosure
- Fused protection for vacuum
- Fused protection for auxiliary outlet
- Class 10 motor overload for vacuum motor
- 5' Power cable
- Male cord cap on distribution outlet
- Requires any three motor vacuum

Available for:

- WS2320-220
- DS2720-CON (230 V)
- DS2720-CON (460 V)
- DuoVac



Single Phase Distribution Box							
Part #	Volts In	Amps In	Vac Volt	Vac Amp	Aux Volts	Aux Amps	Aux Plug
205005	240 / 1 / 60	60	240 / 1 / 60	20	240 / 1 / 60	40	30 Amp

Three Phase Distribution Box							
Part #	Volts In	Amps In	Vac Volt	Vac Amp	Aux Volts	Aux Amps	Aux Plug
205010	230 / 3 / 60	60	240 / 1 / 60	20	230 / 3 / 60	40	30 Amp
205020	230 / 3 / 60	80	240 / 1 / 60	20	230 / 3 / 60	60	50 Amp
205025	230 / 3 / 60	100	240 / 1 / 60	20 (x 2)	230 / 3 / 60	60	50 Amp
205030	230 / 3 / 60	90	230 / 3 / 60*	40	230 / 3 / 60	50	50 Amp
205035	460 / 3 / 60	60	460 / 3 / 60*	20	460 / 3 / 60	40	30 Amp

*Includes motor starter w/ overload protection



Ruwac



MADE IN
THE USA

