



# Versa Pro - MH48

17" Rotary Floor Machine 175 RPM  
with Interchangeable  
13", 15", 19" and 21" Aprons

Safety enhanced non-conductive dual triggers / eliminates shock potential

Precision balanced, heavy-duty 66-frame motor / for easiest operation

Non-marking, fixed 6" wheels / for easy transport

Triple-planetary high torque transmission / handles the most demanding applications


All metal chassis / added weight for fastest results

Safety enhanced interlock switch / both hands are conveniently in control

Fully adjustable handle position / comfortable for all operators

Motor plugs in at handle base / for easiest maintenance

Complete a range of floor care jobs with 5 aprons on 1 powerful machine

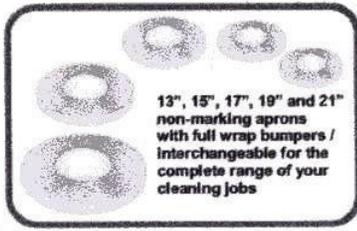

13", 15", 17", 19" and 21" non-marking aprons with full wrap bumpers / interchangeable for the complete range of your cleaning jobs



| SPECIFICATIONS        |  |        |        |        |        |
|-----------------------|--|--------|--------|--------|--------|
| Model Number          | MH48   |        |        |        |        |
| Brush Speed           | 175 RPM                                      |        |        |        |        |
| Motor Type            | 1.5 HP A/C 2 capacitors                      |        |        |        |        |
| Amp Draw              | 13-15 amps                                   |        |        |        |        |
| Interchangeable Apron | 13"  | 15"    | 17"    | 19"    | 21"    |
| Part Number           | AC913A                                       | AC915A | AC917A | AC919A | AC921A |
| Chassis               | Polished aluminum                            |        |        |        |        |
| Power Cord            | 50 foot safety blue 14/3 Ga.                 |        |        |        |        |
| Weight                | 98 - 107 lbs. (depending on apron selection) |        |        |        |        |
| Wheels                | 6" non-marking                               |        |        |        |        |
| Warranty              | 5 years motor and gearbox                    |        |        |        |        |

# 1.0 Safe Operating Conditions


READ THIS MANUAL BEFORE USING THIS FLOOR MACHINE. KNOW THE PROPER OPERATION, CORRECT APPLICATIONS AND THE LIMITATIONS OF THIS EQUIPMENT **BEFORE** USE.

## Reduce the risk of fire, electric shock, or injury:


- This floor machine is designed for indoor use only. Do not use outdoors. Do not expose to rain.
- Do not wash motor with flowing water. If motor gets wet, seek authorized service.
- Keep the vents on this air-cooled motor free of debris. Do not operate with the motor covered or with vents blocked.



- Never operate this floor machine near flammable dusts, liquids or vapors. Never use flammable solvents as a cleaning agent. Engine sparks and operating heat can cause a fire.
- Never handle electrical equipment with wet hands. Never operate this floor machine with bare feet.

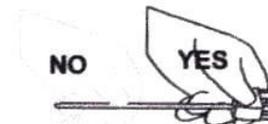


- Unplug the floor machine when not in use and when servicing the equipment. To unplug, grasp the plug, not the cord.
- Do not operate a floor machine with damaged handle controls, cord, or plug. If the equipment is not performing properly, seek repair from a qualified service supplier.

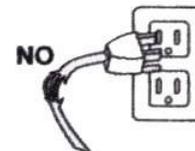

- This floor machine is constructed with electrical grounding at the plug. Operate only when connected to a properly grounded outlet. See section 1.2 for grounding details.

- Prevent electrical cord abuse. Do not close a door upon the cord, drive equipment over it, or run the floor machine over it. Do not expose the cord to hot surfaces. Do not lift, pull or carry this floor machine by the cord.

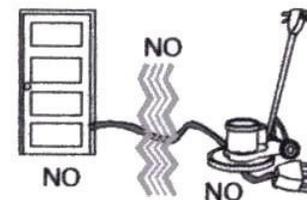

- Never operate the floor machine over sharp objects that can be thrown out and harm the operator and damage the floor. Sweep hard-floors before scrubbing or buffing. Vacuum clean carpets before shampooing or bonnet cleaning.
- Train your staff in the proper use of this floor machine.

## (2) Versa Pro™ Heavy Duty 175 RPM Floor Machine

## 1.1 Electric Power

This floor machine operates on a 15 amp nominal 115V, 60 Hz, A.C. power circuit. (Motors may be custom wired at the factory for 220 V, 50 Hz international operation.) The amp, hertz, and voltage ratings are listed on the motor spec label found on each machine. Using voltages above or below those indicated on the spec label will damage the motor. Always check your local voltage requirements.



## 1.2 Grounding Instruction

This floor machine must be **grounded** while in use to protect the operator from electrical shock. This floor machine is built with a 3-wire cord and a 3-prong grounding type plug (Figure 1) to fit the properly grounded receptacle.

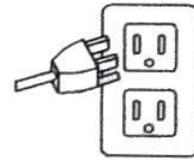


Figure 1

Before using this floor machine, make sure a properly grounded, 3-hole electrical outlet is available. If not, as in some older facilities, use an adapter for connecting a 3-prong plug to a 2-prong receptacle (Figure 2) to ground to the outlet chassis.

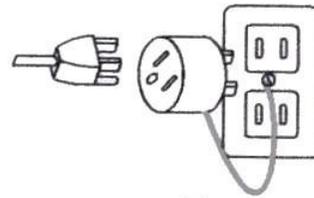


Figure 2

**IMPORTANT!!** This adaptor may not be used in Canada.

**IMPORTANT!!** Never cut off the grounding prong for use in a 2-prong outlet. By doing so, you have cut off your protection from electrical shock.

Never assume that all 3-hole outlets are properly grounded.

Never assume that an adaptor connection (as in Figure 2) is properly grounded. Check the outlet with a **ground fault interrupter device** which quickly indicates if a ground is connected. Correct a faulty grounding before proceeding.


## 1.3 Extension Cords

This floor machine is shipped with a 50 foot (15 M) long safety cord which plugs directly into an approved outlet. The use of an extension cord is not recommended.

## 2.0 Install the Handle

This machine handle (1) has been custom fit to its mounting yoke (2) at the factory and then taken apart for shipping. For easy assembly, make sure that the handle number on the tag (see right) matches the serial number stamped on the chassis.


This floor machine is shipped from the factory with the handle unattached. You will need two 7/16" wrenches to complete the assembly.

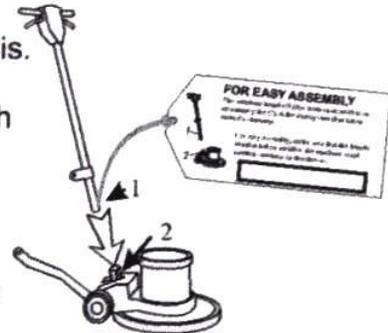

1. Remove the handle and mounting hardware from the carton. Bolts, nuts, washers, and the locking lever assembly are in the plastic bag attached to the handle.

2. Slide the handle tube (1) over the mounting yoke (2) with the power cord facing the motor. Push the tube down until the bolt holes are lined up.


3. Insert the mounting bolts (3) into the bolt holes **from the back of the machine**. Secure each bolt with a locking nut (4). The locking nuts (4) will face the motor.

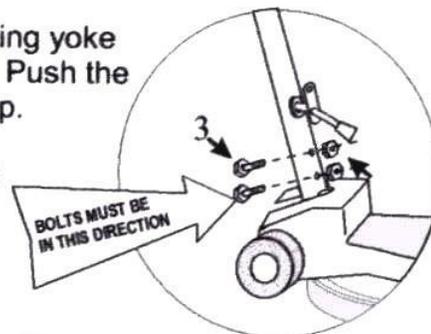

4. The handle mounting collar (5) is designed to slide freely up and down the handle tube. This feature allows the handle to be adjusted for the comfortable operation of all users. Align the mounting collar (5) and the two bent handle braces (6).



5. Take the lever assembly from the bag.
  - Place the curved spacer (8) with a square hole onto the locking lever shaft (7). The curve must face the lever.
  - Insert the shaft through the mounting hole in the right handle brace, the mounting collar, and the left handle brace.
  - Place a spacer (9) on the shaft.
  - Place the split washer (10) on the shaft.
  - Place the locking wing nut (11) on the shaft.
  - Adjust the wing nut for tightness.

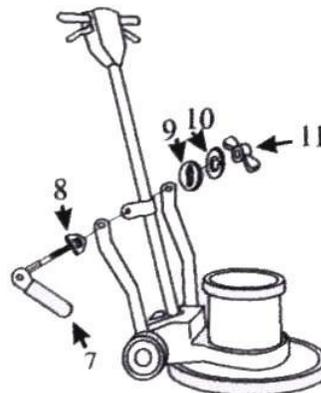


When correctly installed, the collar slides easily when the cam-engineered locking lever is "up", but is firmly fixed when the lever is "down".

## (4) Versa Pro™ Heavy Duty 175 RPM Floor Machine

## 2.1 Install / change the apron

If you've purchased more than one apron, you can easily change aprons for different cleaning jobs.


- Lock the handle in the "up" position and tip the floor machine back.
- If you're changing the apron, give the brush a quick flip counter-clockwise to unlock and remove the brush.
- Remove the 3 knurled thumb nuts that hold the apron to the machine chassis.
- Remove the existing apron.
- Align the new apron..
- Re-install the three bolts and tighten.
- Install a brush that is 2" smaller than the apron.

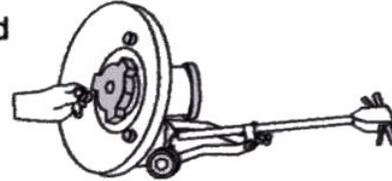

## 2.2 Attach the Power Cord

The triple-wire grounded power cord has been factory-installed into the handle tube. Plug the male connector (9) coming out of the motor housing into the female connector (10) coming out of the end of the handle tube.

Lock the handle in the "up" position and tip the machine back. Plug the end of the 50 foot cord into a grounded power outlet. Slide the red safety interlock switch forward and squeeze the triggers on the handle to check for power to the motor.

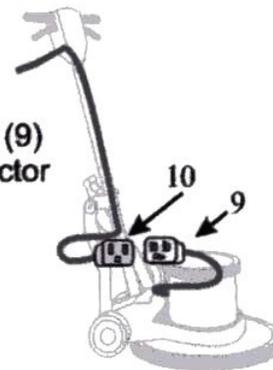

## 2.3 Install a Brush or Pad Driver




A brush or pad driver mounts onto your floor machine with a "B" style Universal clutch plate.

Unplug the floor machine. Lock the machine handle in the "up" position and tip the floor machine back onto the handle.

Slide the brush or pad driver clutch plate (11) over the drive plug (12).

Quickly spin the brush counter-clockwise to lock the brush onto the drive plug.

Now, lower the machine back onto the brush. You're ready to go to work.

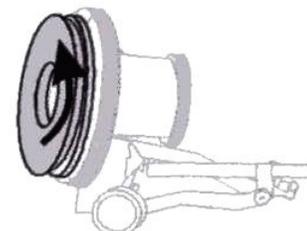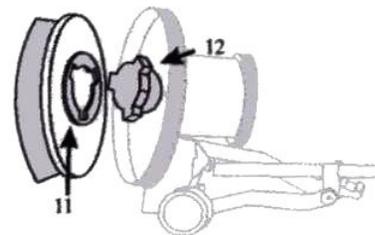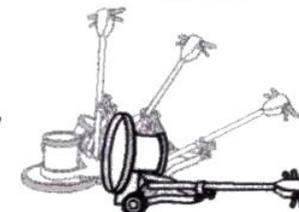


**Versa Pro™ Heavy Duty 175 RPM Floor Machine (5)**

# Versa Pro - MH48

Rotary Floor Machine with Interchangeable

13", 15", 17", 19" and 21" Aprons

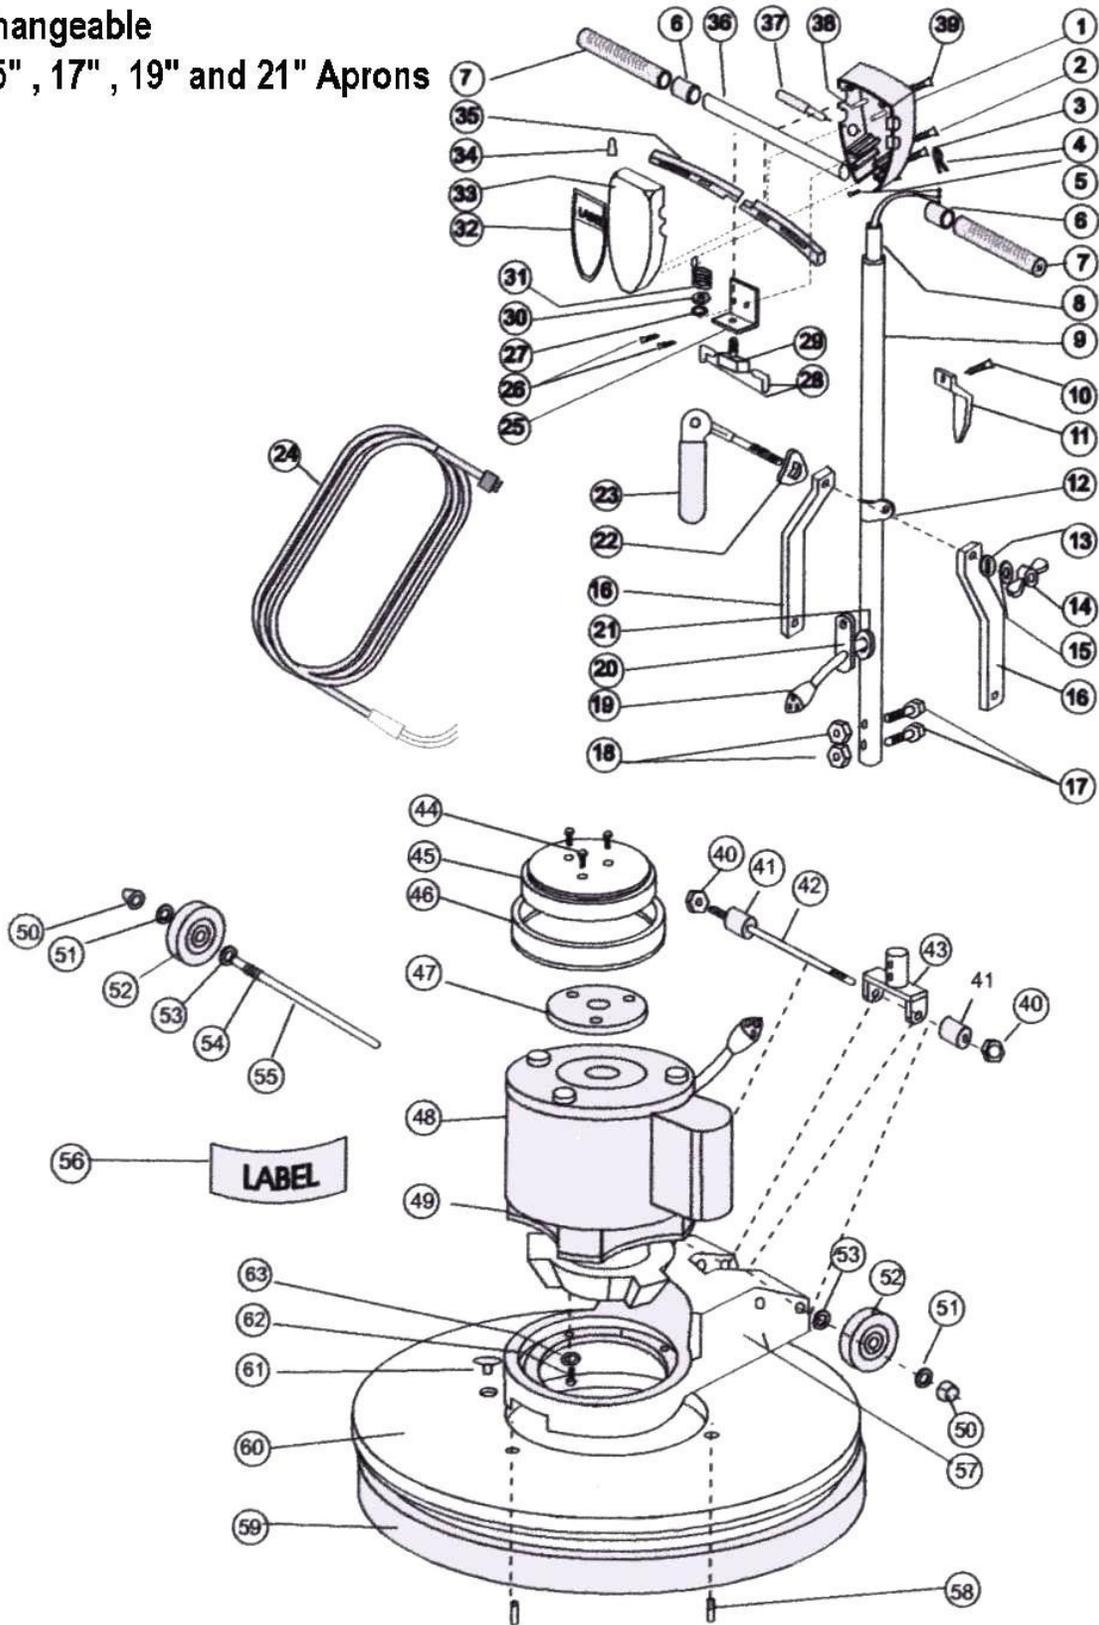


(6) Versa Pro™ Heavy Duty 175 RPM Floor Machine

| Number | Description                         | PART #      | # Required |
|--------|-------------------------------------|-------------|------------|
| 1      | Switch Box Back                     | A-104       | 1          |
| 2      | Handle Tube Screw                   | B-23        | 2          |
| 3      | Switch Box Closing Screw            | B-21        | 4          |
| 4      | Strain Relief Clip                  | M-213       | 1          |
| 5      | Ground Wire Screw                   | B-68        | 2          |
| 6      | Rubber Spacer                       | M-218 Y     | 2          |
| 7      | Hand Grip                           | M-218       | 2          |
| 8      | Handle Tube Insert                  | M-247       | 1          |
| 9      | Handle Tube Assembly                | M-206       | 1          |
| 10     | Cable Hook Screw                    | B-2         | 2          |
| 11     | Cable Hook                          | A-164       | 1          |
| 12     | Sliding Collar                      | A-111       | 1          |
| 13     | Oval Hole Cam Washer                | B-37        | 1          |
| 14     | Cam Lock Wing Nut                   | B-25        | 1          |
| 15     | Cam Split Washer                    | B-39        | 1          |
| 16     | Bent Bracc                          | M-216       | 2          |
| 17     | Yoke Bolt                           | B-18A       | 2          |
| 18     | Yoke Nut                            | B-19        | 2          |
| 19     | Handle Tube Cable                   | G-16        | 1          |
| 20     | Black Rubber Cable Connector        | M-249       | 1          |
| 21     | Cable Grommet                       | B-63        | 1          |
| 22     | Rectangular Hole Cam Washer         | B-67        | 1          |
| 23     | Complete Cam Assembly               | CCA         | 1          |
| 24     | 50 Foot Cable 14/3 Yellow           | G-14-50-Y   | 1          |
| 25     | Switch Mounting Plate               | G-30-B      | 1          |
| 26     | Switch Plate Screw                  | B-1         | 2          |
| 27     | Int. Tooth Lock Washer (For Switch) | B-35        | 1          |
| 28     | Insulated Flag Wire Connector       | G-48        | 2          |
| 29     | On-Off Switch And Plate Assembly    | G-30-AB     | 1          |
| 30     | Lock Washer                         | B-33        | 1          |
| 31     | Trigger Return Spring               | G-30-CT057  | 1          |
| 32     | Label For Switch Box                | CALL FOR #  | 1          |
| 33     | Switch Box Front                    | A-103       | 1          |
| 34     | Wire Connector                      | G-47        | 1          |
| 35     | Trigger                             | A-105       | 2          |
| 36     | 16" Crossbar                        | M-211-A     | 1          |
| 37     | Safety Interlock Assembly           | SIA-1       | 1          |
| 38     | Trigger Pins                        | B-70        | 2          |
| 39     | Crossbar Screw                      | B-22        | 2          |
| 40     | Acorn Nut For Yoke Pin              | B-8         | 2          |
| 41     | Rubber Yoke Spacer                  | B-5         | 2          |
| 42     | Yoke Pin                            | B-7         | 1          |
| 43     | Yoke                                | A-1001      | 1          |
| 44     | Drip Cap Mounting Screw             | B-151       | 3          |
| 45     | 66 Frame Drip Cap Cover             | M-242       | 1          |
| 46     | 66 Frame Drip Cap Cover Bumper      | M-239       | 1          |
| 47     | Cork Drip Cap Gasket                | M-248       | 1          |
| 48     | Motor 66 Frame 1.5 HP With Gearbox  | MOTOR/GB    | 1          |
| 49     | Gear Box, 11:1, Triple Planetary    | GB96008,L,H | 1          |
| 50     | Hub Caps                            | V0038       | 2          |
| 51     | Spring Washer                       | B-51        | 4          |
| 52     | 6" Wheels                           | M-250       | 2          |
| 53     | ½" Flat Washer                      | B-29        | 2          |
| 54     | Spring                              | B-30        | 2          |
| 55     | Axle                                | M-240       | 1          |
| 56     | Label for Motor                     | CALL FOR #  | 1          |
| 57     | Main Machine Frame                  | A-166       | 1          |
| 58     | Apron Mounting Thumb Screw          | B-96        | 4          |
| 59E    | Bumper 13"                          | M-232-13    | 1          |
| 59A    | Bumper 15"                          | M-232-15    | 1          |
| 59B    | Bumper 17"                          | M-232-17    | 1          |
| 59C    | Bumper 19"                          | M-232-19    | 1          |
| 59D    | Bumper 21"                          | M-232-21    | 1          |
| 60B    | Apron 13"                           | A-163       | 1          |
| 60B    | Apron 15"                           | A-167       | 1          |
| 60B    | Apron 17"                           | A-169       | 1          |
| 60C    | Apron 19"                           | A-171       | 1          |
| 60D    | Apron 21"                           | A-172       | 1          |
| 61     | Scrubber Plug                       | B-50        | 1          |
| 62     | Apron Screw                         | B-95        | 3          |
| 63     | ¼" Medium Split Washer              | B-32        | 3          |


## Versa Pro™ Heavy Duty 175 RPM Floor Machine (7)

## 3.0 Operating Tips


- For indoor use only.
- Sweep abrasive soils before scrubbing.
- While the brush or pad driver is spinning, keep the floor machine moving to avoid "donut" burns on the floor.
- To start operation:
  - Unlock the handle by raising the locking lever.
  - Lower the handle to a comfortable position, typically waist height.
  - Relock the handle by pushing the lever down.**NEVER OPERATE THE MACHINE WITH THE HANDLE UNLOCKED.**
- This floor machine has a high torque motor. Hold the machine firmly with both hands when starting up.
- Push the red safety interlock switch forward to unlock the dual triggers.
- Squeeze the dual triggers to release power to the motor. Once power is on, either trigger will keep power to the motor.
- To stop the floor machine, release both triggers.
- The spinning brush helps move the floor machine. (Lift the handle slightly to work to the right. Push the handle down slightly to work to the left.)

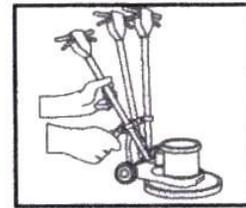


**SET HANDLE HEIGHT**

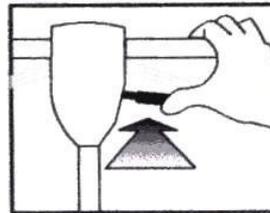

**PUSH LOCK FORWARD**

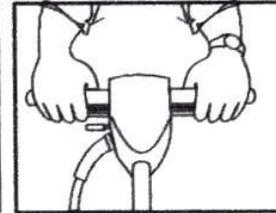


**SQUEEZE BOTH TRIGGERS**

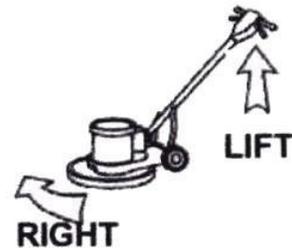

## 3.1 To store your machine

- Lock the handle in the "up" position. Tilt the machine back and remove the pad driver or brush.
- Wind the cord around the handles and the bottom cord hook.
- Wash brushes or pads and hang to dry.
- Never store machine standing on the brush.
- Inspect and maintain equipment on a regular schedule for best results.
- ✓ Check and clean pads after each operation. Remove soil and chemical buildup. Replace worn or damaged pads.
- ✓ Check the triggers and switches for proper operation.
- ✓ Repair or replace damaged skirts and bumpers.
- ✓ Use air pressure or vacuum to remove dust and debris from the motor vents.

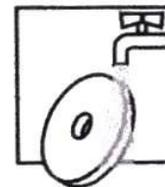


## (8) Versa Pro™ Heavy Duty 175 RPM Floor Machine

## 3.2 Transport

To transport this floor machine from the janitor's closet to the work area:

- Lock the handle in the "up" position. Wind the cord around the handles and the bottom cord hook.
- Tip the machine back onto the transport wheels. Push or pull the machine by the handle, not by the cord or any other part of the machine. Travel carefully.

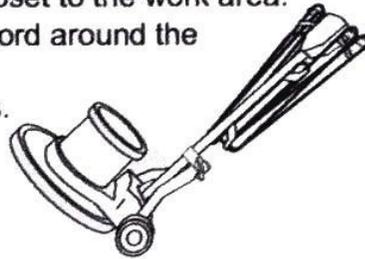

## 4.0 Troubleshooting

Never operate this floor machine when the equipment is not performing as expected or when any part is visibly damaged. The cause and solution for some basic problems are described below. When repair is needed, take the equipment to an authorized repair service center.

### 4.1 Floor machine will not run

- Circuit breaker tripped in building. **Check and reset.**
- Equipment unplugged. **Check plug at wall and at machine base. Plug in.**
- Power cord failure. **Test with a working power cord. Lock the handle up and tip the motor back. Unplug the cord at the motor and plug the motor into your working power cord.**  
**IMPORTANT! THIS IS JUST FOR TESTING. When you do this, you have removed the safety handle controls from the circuit and you are sending power directly to the motor. If the motor now spins, the problem is in the cord or the handle assembly. Seek authorized repair service.**  
**If the motor still does not spin, the problem is either in the male connection at the motor base or in the motor. Seek authorized repair service.**
- Motor sparks or smokes. **Seek authorized repair service.**

### 4.2 Electrical shock to operator

- Equipment wiring failure or electrical short in the machine. **Seek authorized service.**
- Poor grounding or no grounding. **Test the outlet with a ground fault interrupter. Retain a certified electrician to inspect and repair grounding. NEVER clip off the ground plug on your cord.**
- Repeated circuit breaking. **High amp draw and circuit breaking can be an electrical or mechanical problem. Seek authorized repair service.**

### 4.3 High Vibration

- Pad not centered. **Tip machine back and re-center the pad.**
- Unevenly wear or warp to pad or brushes. **Replace.**
- Machine chassis damaged by dropping. **Replace.**

**Versa Pro™ Heavy Duty 175 RPM Floor Machine (9)**

## 5.0 Brush Construction


Your new floor machine provides reliable, efficient, safe power to your scrubbing brush. To get the best results, you need to use a brush of the best design and construction.

Your floor machine is built with a "B" style **drive plug (1)**. The height and width of the ears on the plug will match a "B"-style or a "Universal" **clutch plate (2)** mounted on the brush block.

The **brush block (3)** is constructed of molded plastic or thick plywood. **Use a brush with a block diameter 2" less** than your machine apron size.

The **bristle material (4)** that actually does the scrubbing is typically 1-1/2" to 2" long. Holes are drilled in the block and bundles of bristles are folded in half, forced into the hole and stapled in place (staple-set).


When the bristles wear down to less than 1/2" long, they have little flexibility and it's time to replace. Bristle materials are described on page 11.

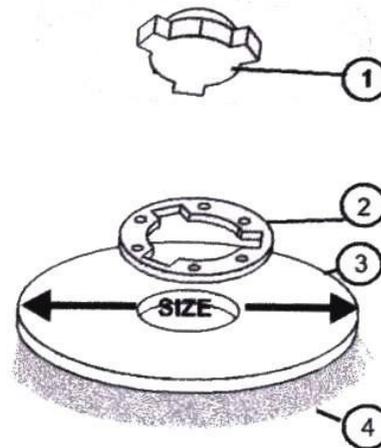

## 5.1 Pad Driver Construction

If you scrub or polish with a **non-woven pad**, use a **pad driver** to connect the pad to the machine.

The **brush block (3)** is constructed of molded plastic, fit with shorter, stiffer, **pad-holding bristles (5)** or "velcro-like" **pad-holding hooks (6)** and use a **riser (7)** to create extra clearance between the block and the machine apron. With this construction **use a pad driver with block diameter 1" less** than your machine apron size.

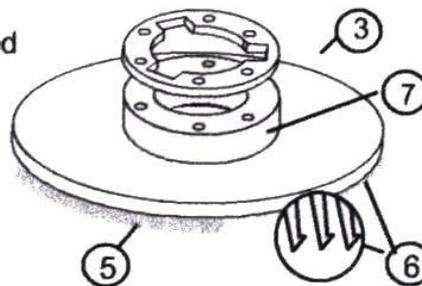

|                                     |            |            |            |            |            |
|-------------------------------------|------------|------------|------------|------------|------------|
| <b>Machine Apron Size</b>           | <b>13"</b> | <b>15"</b> | <b>17"</b> | <b>19"</b> | <b>21"</b> |
| <b>Pad Driver - with 3/4" Riser</b> | <b>12"</b> | <b>14"</b> | <b>16"</b> | <b>18"</b> | <b>20"</b> |
| <b>Brush - with NO RISER</b>        | <b>11"</b> | <b>13"</b> | <b>15"</b> | <b>17"</b> | <b>19"</b> |

(10) Versa Pro™ Heavy Duty 175 RPM Floor Machine

## **5.2 Brushes and Pad Drivers**

### **For Encapsulation Cleaning and Carpet Shampooing**

|               |  |
|---------------|--|
| <b>AC913B</b> | Carpet Shampoo Brush, 11" Fits 13" Machine |
| <b>AC915B</b> | Carpet Shampoo Brush, 13" Fits 15" Machine |
| <b>AC917B</b> | Carpet Shampoo Brush, 15" Fits 17" Machine |
| <b>AC919B</b> | Carpet Shampoo Brush, 17" Fits 19" Machine |
| <b>AC921B</b> | Carpet Shampoo Brush, 19" Fits 21" Machine |
| <b>AC96</b>   | Shampoo Tank 4 gallon                      |

### **For Tile and Grout Cleaning**

|               |   |
|---------------|---|
| <b>AC913C</b> | Tile Cleaning Brush, 11" Fits 13" Machine |
| <b>AC915C</b> | Tile Cleaning Brush, 13" Fits 15" Machine |
| <b>AC917C</b> | Tile Cleaning Brush, 15" Fits 17" Machine |
| <b>AC919C</b> | Tile Cleaning Brush, 17" Fits 19" Machine |
| <b>AC921C</b> | Tile Cleaning Brush, 19" Fits 21" Machine |

### **For Bonnet Cleaning and VCT Floor Care**

|              |                |
|--------------|----------------|
| <b>AC913</b> | 13" Pad Driver |
| <b>AC915</b> | 15" Pad Driver |
| <b>AC917</b> | 17" Pad Driver |
| <b>AC919</b> | 19" Pad Driver |
| <b>AC921</b> | 21" Pad Driver |

### **Care for Stone and Marble**

|              |                        |
|--------------|------------------------|
| <b>MH48W</b> | Unicorn and Weight Kit |
|--------------|------------------------|

### **Interchangeable Aprons with Non-Marking Bumpers**

|               |                       |
|---------------|-----------------------|
| <b>AC913A</b> | 13" Apron with Bumper |
| <b>AC915A</b> | 15" Apron with Bumper |
| <b>AC917A</b> | 17" Apron with Bumper |
| <b>AC919A</b> | 19" Apron with Bumper |
| <b>AC921A</b> | 21" Apron with Bumper |

# Hydro-Force Inc. New Equipment Warranty

## Limited Warranty

Hydro-Force Inc. warrants new equipment against defects in material and workmanship under normal use and service to the original purchaser. Any statutory implied warranties, including any warranty of merchantability or fitness for a particular purpose, are expressly limited to the duration of this written warranty. Hydro-Force Inc. will not be liable for any other damages, including but not limited to indirect or special consequential damages arising out of or in connection with the furnishing, performance, use or inability to use the machine. This remedy shall be the exclusive remedy of the purchaser. The warranty period is subject to the conditions stated below.

## 5 Years - Motor and Gearbox. 1 Year- Service Labor

Hydro-Force Inc. warrants electric motors and transmission gearboxes on all Hydro-Force Inc. floor machines to be free from defects in material and workmanship, under normal use and service for five (5) years to the original purchaser. Parts replaced or repaired under this warranty are warranted for the remainder of the original warranty period. Service labor charges are covered for one (1) year from the date of purchase, when performed by a Hydro-Force Inc. authorized-service provider. Freight charges to and from this service providers will be covered for 90 days from the purchase date. After this 90 day period, these freight charges will be paid by the equipment owner. Travel expenses are not covered.

## Wear Items on All Machines

**Critical Wear Items** - bearings, clutches, pulleys, relays, capacitors, rectifiers, wheels, tires and casters will be warranted for manufacturing defects for one (1) year from the purchase date.

**Normal Wear Items** - belts, brushes, bumpers, carbon brushes, cords, finishes, squeegees, actuating cables, and gaskets will be warranted for manufacturing defects for ninety (90) days from the purchase date.

All warranties of motors and associated components will be voided; if the machine is used as a floor sander; if the machine is serviced by anyone other than a Hydro-Force-authorized service provider; if the machine is mechanically modified; or if the machine is misused or abused.

The warranty starts on the purchase date by the original purchaser from Hydro-Force Inc., subject to proof of purchase. The Machine Registration Card must be completed and returned immediately at the time of purchase. If proof of purchase cannot be identified, the warranty start date is 90 days after the that the new machine arrived in Hydro-Force Inc. inventory.



HYDRO-FORCE, INC.  
542 West Confluence Avenue  
Salt Lake City, Utah 84123  
(800) 637-3789 - Toll Free  
(801) 268-2673 - Local  
(800) 284-4131 - FAX